



ISTRUZIONI PER LA MODIFICA DEI PARAMETRI
DELLA CENTRALINA ELETTRONICA

PARAMETERS MODIFICATION
OF ELECTRONIC CONTROL PANEL



INSTRUCTIONS POUR LA MODIFICATION
DES PARAMETER UTILISATEUR

ANLEITUNGEN ZUR PARAMETERÄNDERUNG DER
ELEKTRONISCH. KONTROLLTAFEL

INSTRUCCIONES PARA LA MODIFICACION
DE LOS PARAMETROS DE LA CENTRALITA ELECTRONICA

GM-GS

IWP750LX Touch

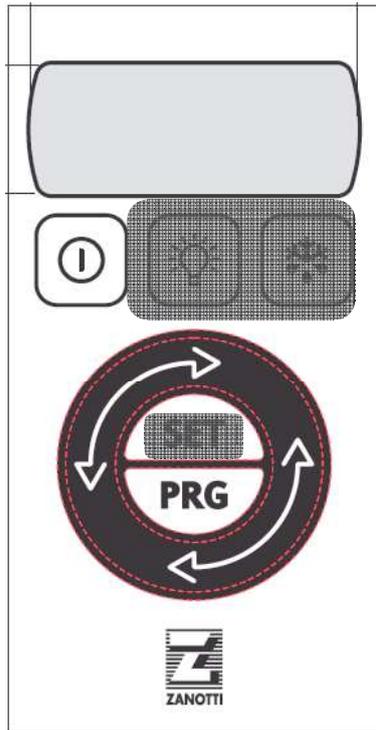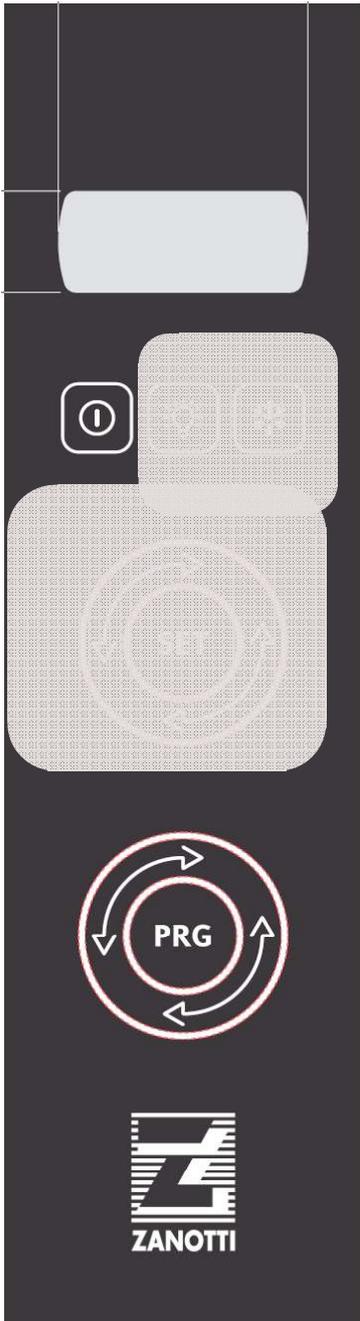

How to program the parameters

Touch PRG key for 5 seconds

It will displayed the label CP (compressor) indicating that you have access to the programming menu.

Act on the wheel to display the desired folder.

Touch the PRG key to access the parameters of the selected folder.

Act on the wheel to select the parameter you want to modify.

Touch the PRG key to display the parameter value and act on the wheel to change it.

Touch the PRG key to store the value and return to display the parameter label.

To return to the folder briefly touch the ON / OFF key

The quick touch of the ON / OFF key has ESE meaning and generally allows to come back to the previous menu level, till the default display.

The default mode is also returns for timeout.

Menu function for state of machine: (Reading sensors, alarm display)

Accessed by brief touch of PRG key. Act on the wheel to select the desired menu and touch PRG to access it.

PARAMETER LIST

Lbl.	Description	2SCH137	2SCH138	2SCH139	2SCH140	UM
		Medium hot gas	Low hot gas	Medium electric	Low electric	
CP	Compressor parameters					
diF	Differential	2	2	2	2	°/1
HSE	Max. temp. allowed setpoint	10	-15	10	-15	°/1
LSE	Min. temp. allowed setpoint	-5	-25	-5	-25	°/1
Ont	ON time if faulty room sensor	10	10	10	10	min
OFt	OFF time if faulty room sensor	20	20	20	20	min
dOF	Time between comp. OFF and next start	2	2	2	2	min
dbi	Time between 2 compresor starts	2	2	2	2	min
dEF	Defrost parameters					
dtY	Defrost operating mode: 1=gas 0=electric	1	1	0	0	num
dit	Time interval between 2 defrosts	3	3	3	3	hours
dt1	Unit of measure for defrost interval	0	0	0	0	flag
dCt	Defrost interval time count mode	0	0	0	0	Num
dEt	Defrost time override	20	20	30	30	min
dSt	Defrost Termination Temperature	15	15	8	8	°/1
FAn	Fans parameters					
FSt	Fans stop temperature	50	50	50	50	°/1
Fdt	Fans ON delay	3	3	3	3	min
dt	Drain Down Time	2	2	2	2	min
dFd	Fans OFF during defrost	Y	Y	Y	Y	flag
FCO	Fans ON during compressor OFF	n	n	n	n	flag
Fod	Fans OFF during door open	n	n	n	n	flag
AL	Alarms parameters					
AFd	Alarm differential	2	2	2	2	°/1
HAL	High temperature alarm setpoint	5	5	5	5	°/1
LAL	Low temperature alarm setpoint	-5	-5	-5	-5	°/1
PAO	Alarm delay after start-up	3	6	3	6	hours
dAo	Alarm delay after defrost	60	60	60	60	min
OAO	Alarm delay after door opening	1	1	1	1	hours
SA3	High temperature alarm setpoint	55	55	55	55	°/1
dA3	Differential	2	2	2	2	°/1
PrE	Pressure alarms parameters					
PEn	Number of pressure trips	10	10	10	10	Num
PEI	Time period for pressure trips	60	60	60	60	min
diS	Display parameters					
CA1	Calibration room sensor	0	0	0	0	°C
dro	Selection Celsius/Farenheit (0 = °C, 1 = °F)	0	0	0	0	flag
ddL	Display during the defrost (0=normal read, 1=read block,2=display deF)	0	0	0	0	flag
CnF	Configuration parameters					
PA2	password setting according second level	/	/	/	/	flag
H41	Presence control probe	y	y	y	Y	flag
H42	Presence evaporator probe	y	y	y	y	flag